

SONY Cross Compatibility

	LH70/71 LY71/72	LT10	LT11	LT20	LT30	LG10, LH51/52/54/61 LY51/52	LH31A/32/33 LH41/42	LH10/11/12/20 LA, LC, LU, LM	LH31A/32 LH41/42 (Digiruler)	LH11/12 NA30/31 (Digiruler)
DE-BR	SZ701	X	X	X	SZ702	OK	X	X	X	X
DG	SZ05 SZ51-MS01 SZ701	X	X	X	SZ05 SZ51-MS01 SZ702	SZ05 SZ51-MS01	SZ05	OK	X	X
DG-B	DZ51 SZ701	X	X	OK	DZ51 SZ702	DZ51	HA13 SZ05 *1	HA13 *1	X	X
DL-B/R	DZ51 SZ701	X	X	OK	DZ51 SZ702	DZ51	X	X	X	X
DK	CE29-xx	X	X	X	OK	CE22-xx SZ51-AB *1	X	X	X	X
DT12/32	MT12-05 DZ51 SZ701	OK	X	MT12-05	MT13-05	MT12-05 DZ51	X	X	X	X
DT512	MT12-05 *2 DZ51 SZ701	X	OK	MT12-05 *2	MT13-01	MT12-05 *2 DZ51	X	X	X	X
GS,GF,GM SR1711	SZ05 SZ51-MS01 SZ701	X	X	CH02-xx	SZ05 SZ51-MS01 SZ702	SZ05 SZ51-MS01	SZ05	OK	X	X
GBP,SR118, SR10,SR50	CE05-xxC SZ51-MS01 SZ701	X	X	CH02-xx	CE05-xxC SZ51-MS01 SZ702	CE05-xxC SZ51-MS01	CE05-xxC SZ04	CE05-xxC	X	X
GB (SR108)	SZ51-MS01 SZ701	X	X	X	SZ51-MS01 SZ702	SZ51-MS01	OK	SZ04	X	X
GB-A	SZ701	X	X	CH03-xx	SZ702	OK	CH01LW-xxC	CH01LW-xxC SZ04	X	X
SR128	CH01-xxC SZ701	X	X	CH03-xx	CH01-xxC SZ702	CH01-xxC	CH01LW-xxC	CH01LW-xxC SZ04	X	X
GB-ER	OK	X	X	X	X	CE30 SZ51AB	X	X	X	X
SR801, MSS101	CE07-xxC SZ51-MS01 SZ701	X	X	X	CE07-xxC SZ51-MS01 SZ702	CE07-xxC SZ51-MS01	CE07-xxC	CE07-xxC SZ04	X	X
PL20, PH51/61	SZ09 SZ51-DR01 SZ701	X	X	X	SZ09 SZ51-DR01 SZ702	SZ09 SZ51-DR01	X	X	SZ09	OK
PL20A	SZ51-DR01 SZ701	X	X	X	SZ51-DR01 SZ702	SZ51-DR01	X	X	OK	SZ06
PL20B	SZ701	X	X	X	SZ702	OK	X	X	DB9P *1	DB9P SZ06 *1
PL20C	OK	X	X	X	X	CE30 SZ51AB	X	X	X	X
SJ700	SZ701	X	X	X	SZ702	OK	X	X	X	X
SJ700A	OK	X	X	X	X	CE30 SZ51AB	X	X	X	X
SJ300	CH33-xxCPD	X	X	X	X	CH33-xxCPD CE30 SZ51AB	X	X	X	X

*1 Note: Soldering required. *2 Note: 5um resolution. xx = Cable length in meters. Yellow = No replacement for this combination. Green = Current product line.